

Contact us if you have any issues or questions

Sales@ProWatercraftRacing.com or
[928-255-0230](tel:928-255-0230)



Installation Instructions
**SEADOO SPARK NOZZLE PIVOT
RELOCATOR**

PW-04S-810

No installation video at this time.




Tools Needed:
Ratcheting Wrench
10mm wrench
10mm Socket
6mm Allen tool
12mm socket (iBR)
13mm socket (iBR)

Supplied with Kit:
Pivot Relocator

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

- 1 For the Intelligent Brake & Reverse (iBR) system, you will need to:
 - 1) Disconnect the battery.
 - 2) Remove the iBR linkage connecting the cable to the iBR bucket using 12mm and 13mm sockets.
 - 3) Remove the iBR bucket using the same sockets, 2 bolts.
 - 4) Remove the nozzle bracket bolts from the pump using a 6mm allen tool.
- 2 Remove the steering cable from the nozzle with a 10mm wrench and socket.
- 3 Remove the nozzle bracket bolts from the pump using a 6mm allen tool.
- 4 Swap out the OEM pivot bushing located at the bottom of the nozzle with your PWR pivot relocator.
- 5 Reinstall the nozzle bolts and steering cable using Loctite.
For the iBR system, reinstall the nozzle bracket and iBR bucket. Reconnect the battery.


iBR
Linkage

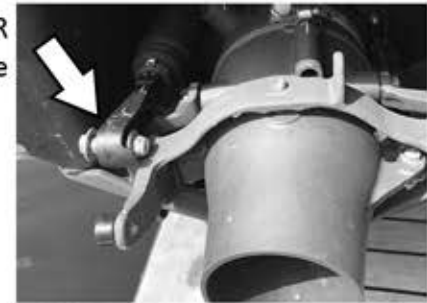

iBR
Nozzle
Bracket



Non-iBR
Steering
Cable End

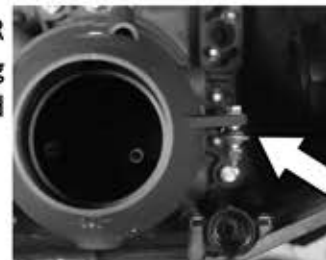

iBR
Steering
Cable End



Please leave our products a review! ★★★★★
Send us an email with your review and receive a discount on your next order of PWR products.