

Contact us if you have any issues or questions

[Sales@ProWatercraftRacing.com](mailto:Sales@ProWatercraftRacing.com) or  
928-255-0230



Installation Instructions  
PROLITE CARBON FIBER  
HANDLEPOLE

PW-01-1000

Our installation video is not yet available.



**Tools Needed:**

10mm Socket / Wrench  
Ratchet  
Adjustable Wrench  
Loctite

**Parts Included:**

ProLite Handlepole  
Pivot Bushings  
Quick-Latch Bracket

**READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION**

- 1 Remove the current handlepole from your ski and then remove the steering system. You will reuse the x6 steering sub plate bolts.
- 2 Replace the stock steering cable bracket with the steering cable quick-latch bracket. FIG 1
- 3 Reposition the turn plate and steering cable ball joint to face up. Slide the steering cable through the handlepole, latch into the new bracket, and attach to the cable ball end.
- 4 Insert the steering system into our handlepole so the pivot stud is facing up. Be aware of cable routing so nothing is rubbing or getting pinched. FIG 2
- 5 Reinstall the x6 steering sub plate bolts from front to back.
- 6 Slide the remaining wires and cables through the handlepole and mount to lever. Check routing by pushing the bars from lock to lock. Adjust where necessary.

**Note:** Be aware of how your new handlepole is resting on your hood. We recommend installing padding to help cushion it from the hood. If this pre-caution is not taken, this could result in damage to the hood or handlepole and/or void warranties.



FIG 1

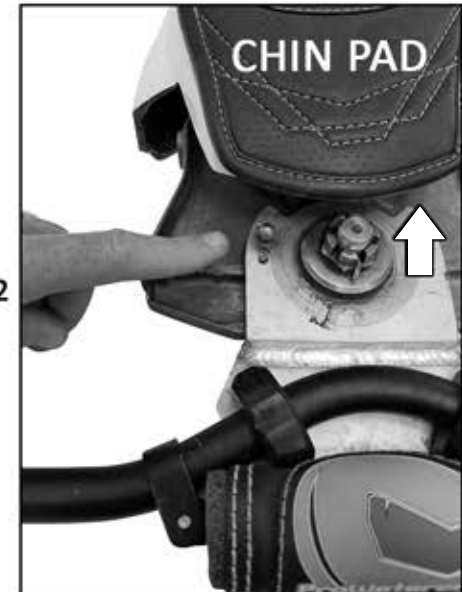


FIG 2

Please leave our products a review! ★★★★★

Send us an email with your review and receive a discount on your next order of PWR products.