

Contact us if you have any issues or questions

Sales@ProWatercraftRacing.com or

[928-255-0230](tel:928-255-0230)



Installation Instructions
YAMAHA SUPERJET BOARDING
HANDLE DELETE

PW-03SJ-650

ProWatercraftRacing.com

No installation video is available.



Tools Needed:


Caulk Gun
Silicone*

Parts Included:

x1 SuperJet
Boarding Handle
Delete

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

- 1 Apply silicone to the rough surface on the bottom sides of the Delete.
- 2 Insert the Delete into the Yamaha Boarding Handle indent.
- 3 Smooth out the silicone and wipe away the excess. Allow 24 hours for the silicone to cure.

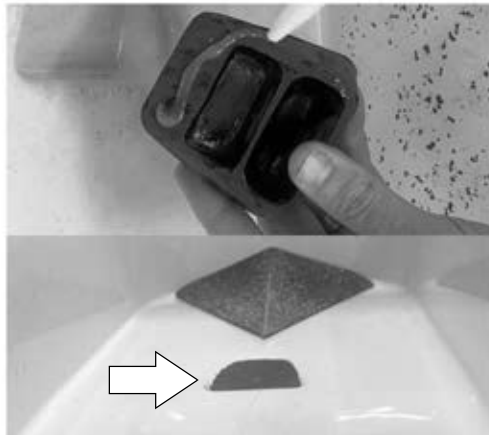

**Use of any other adhesive besides ProWatercraft's approved silicone will void the warranty. Use IS808 silicone adhesive.*