

Contact us if you have any issues or questions

Sales@ProWatercraftRacing.com or
[928-255-0230](tel:928-255-0230)



Installation Instructions
YAMAHA EX
REAR SPONSONS
PW-03X-200

ProWatercraftRacing.com



INSTALLATION VIDEO



Tools Needed:

Ratchet
Socket Extension
12mm Socket
Loctite


Parts Included:

x2 Rear Sponsons

READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

This install requires the OEM hardware. If you do not have the hardware, you can source them from your local Yamaha parts dealer.

- 1 Remove the three fasteners holding on each sponson. If you have the OEM sponsons, keep the collars with your OEM bolts. **Fig 1**
- 2 After removing your rear sponson, make sure the hull is clean from silicone and debris.
- 3 Install the ProWatercraft sponson starting at the center with the OEM bolt and collar. Start each bolt by hand and when all the bolts are in, then tighten until snug. We recommend using Loctite. **Fig 2**
- 4 Repeat Steps 1-3 for the other sponson.
- 5 After your first ride, look over the sponsons and make sure the bolts are tight. Tighten as necessary.

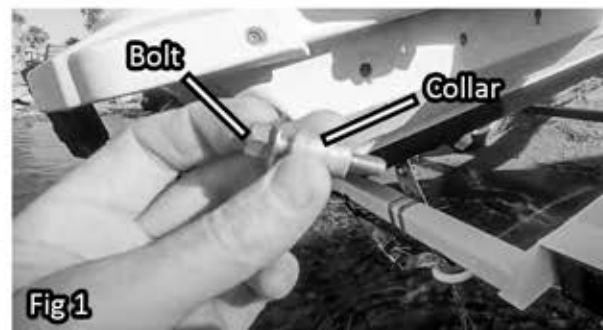

Please leave our products a review! ★★★★★

Send us an email with your review and receive a discount on your next order of PWR products.